





A




B

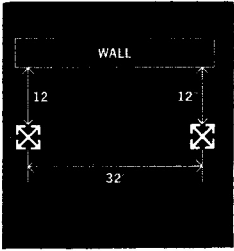


The first step in installing your OMNI unit is to position the poles. Begin with the end pole and be sure that it is plumb. Work from this pole as a reference point. (See diagram) When used away from the wall as a room divider or partitioning, be sure poles are in perfect alignment.

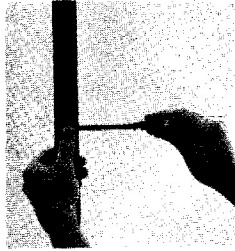

All other poles can be installed by measuring with a ruler. They must be exactly 32" center to center from each other and 12" from the back of poles to the wall.

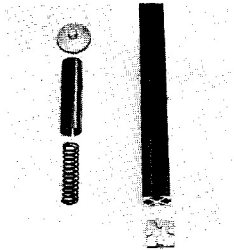


The pole consists of a fitted rubber foot plus a spring loaded top connector. The pole itself should be 2" shorter than your floor to ceiling height.



Assemble one pole at a time as you install it.




Shelf brackets fasten directly into the slot of the pole. A mounting block is attached first at the desired height. A wrench for tightening all nuts is furnished with each order. The winged nut should turn and lock behind the pole walls.

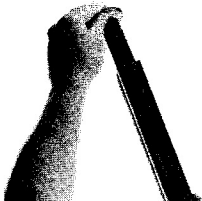

Place top of pole in position on ceiling. Swing bottom of pole into place and check position (exactly 12" from back of pole to wall). Small adjustments can be made by tapping the pole with the palm of your hand or with a rubber mallet.



Shelf brackets are inserted sideways into the pole slot and dropped down over the mounting block.

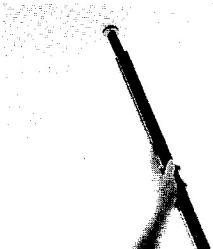

Check the first pole installed with a level or plumb line to insure that it is exactly straight.



Shelves attach with screws into threaded metal inserts. Trim covers holes in exposed portion of bracket.

